

Sekrè pou Bati Kay Parasismik



Konfigirasyon



Pozisyon



Materyo



Fondasyon



Ferayaj



Beton



Masònri



Chapantri



Sèvis piblik

SEKRÈ 1:



Desine yon fòm senp epi simetrik.



SEKRÈ 2:



Fè longè a pa plis pase 3 fwa lajè a.




SEKRÈ 3:



Fè wotè Redchoose a pa plis pase 2.7m.



SEKRÈ 4:

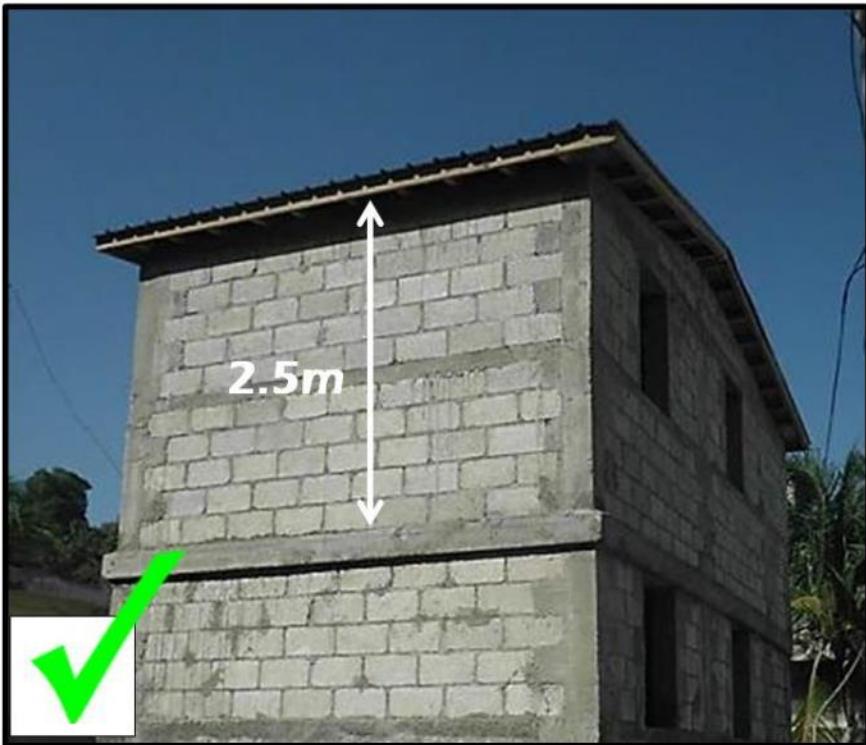

Fè wotè etaj la pa plis pase 2.5m.



SEKRÈ 5:



Aliyen tout fenèt ak pòt yo.



SEKRÈ 6:



Aliyen tout Poto yo youn anba lòt.



SEKRÈ 7:



Aliyen tout mi yo youn anba lòt.



SEKRÈ 8:



Plase poto nan chak kwen mi yo.



SEKRÈ 9:



Plase poto nan chak kwazeman mi yo.



SEKRÈ 10:



Plase poto pa plis pase 3.5 mèt.



SEKRÈ 11:



Plase yon chenaj enferyè sou fondasyon an.



SEKRÈ 12:



Plase yon chenaj entèmedyè anba fenèt yo



SEKRÈ 13:



Plase yon chenaj siperyè sou tèt mi yo.



SEKRÈ 14:



Plase fenèt yo anba chenaj siperye a.



SEKRÈ 15:



Plase ranfòseman alantou fenèt yo.



SEKRÈ 16:



Bati kay la sou yon pant pa plis pase 35 pouzan.



SEKRÈ 17:



Bati kay la sou yon distans omwen 10m bò kote ravin
oswa rivye.



SEKRÈ 18:



Plase kay la nan yon zòn ki gen bon jan drenaj.



SEKRÈ 19:



Plase kay la omwen 1.5m bò kote lòt kay yo.



SEKRÈ 20:



Sèvi ak dlo pwòp.



SEKRÈ 21:



Achte sab rivyè lave




SEKRÈ 22:



Achte gravye kase pa plis pase 2.0cm dyamèt





SEKRÈ 23:

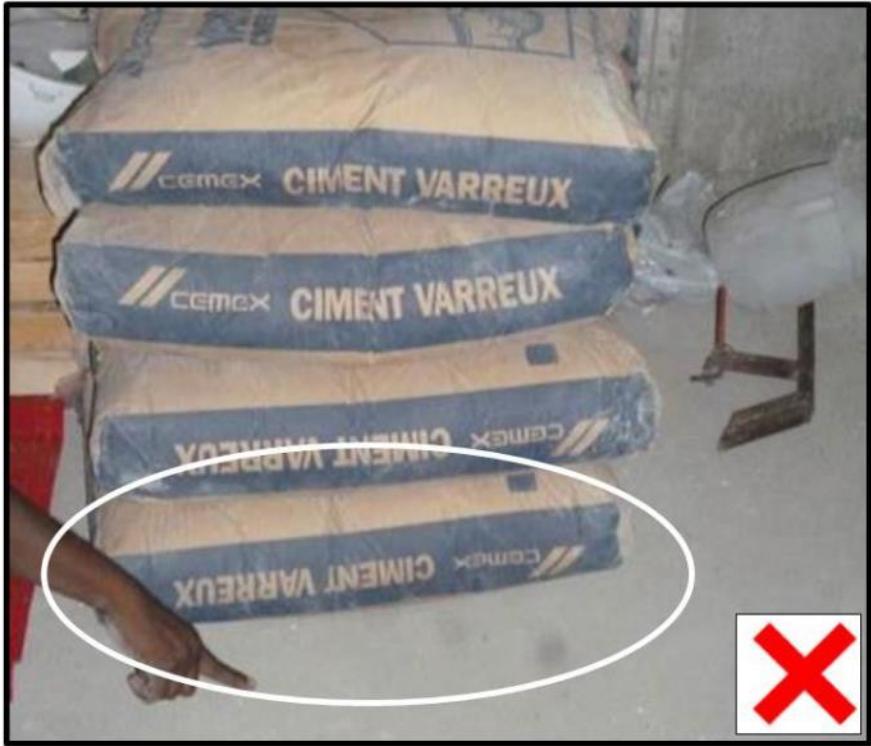

Estoke siman yo anndan sou yon palèt.





SEKRÈ 24:

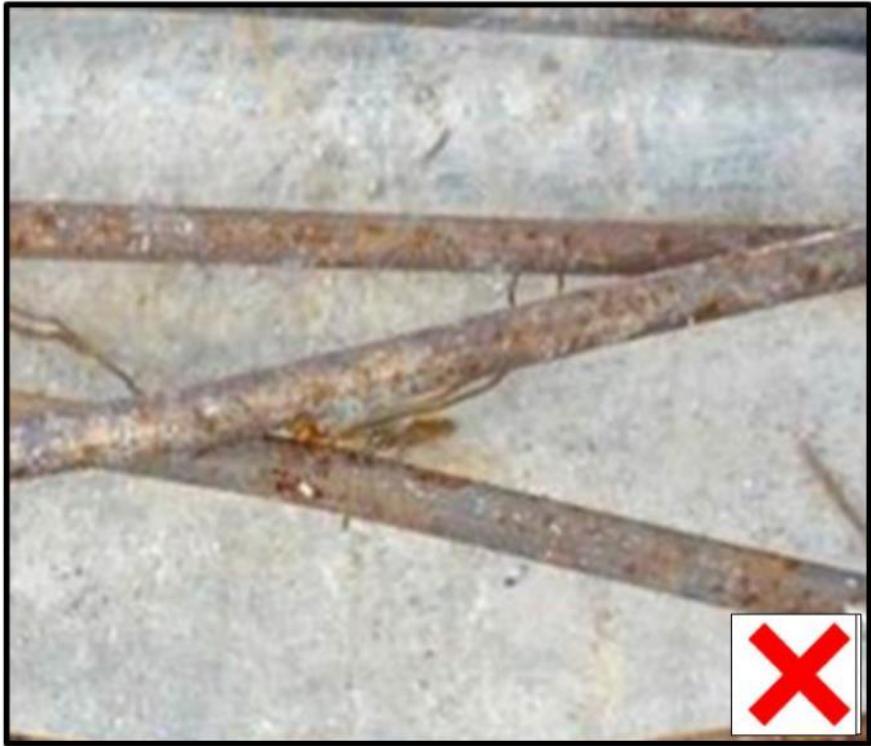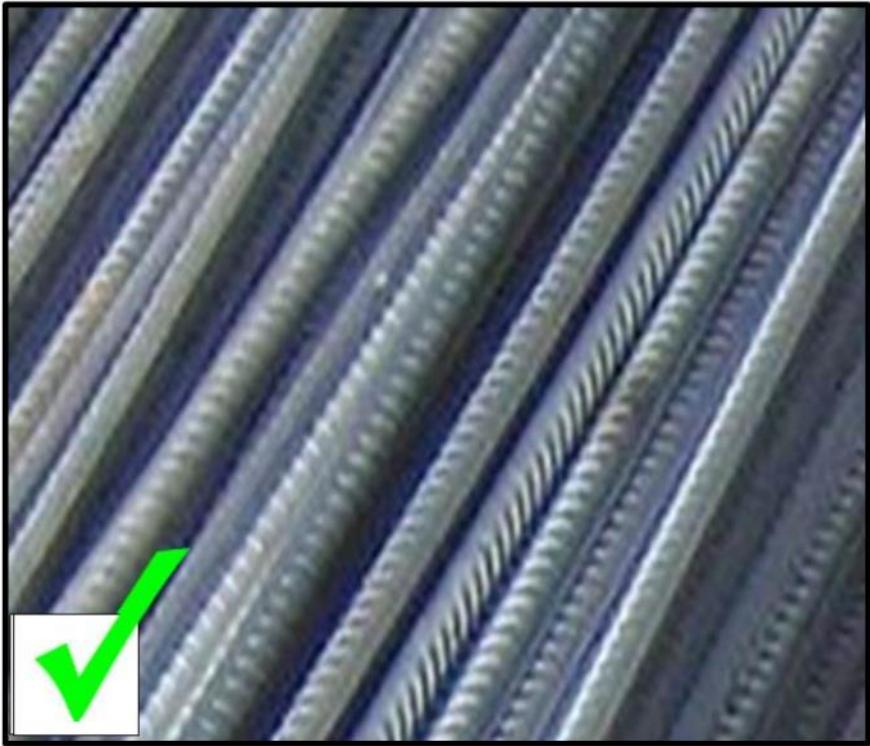

Achte ba fè zoreken ki pa twò wouye



SEKRÈ 25:

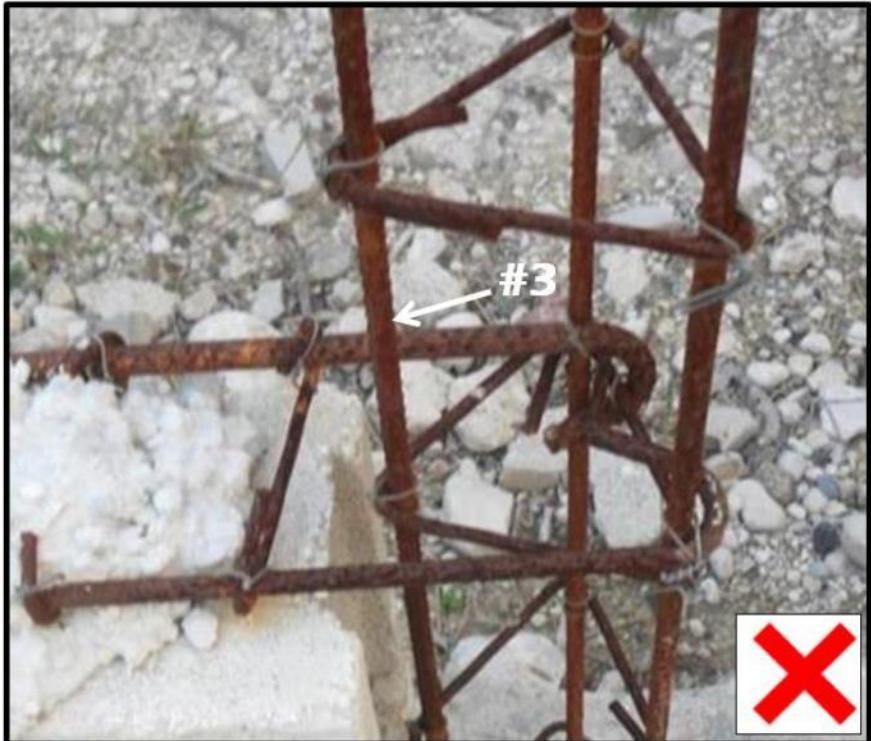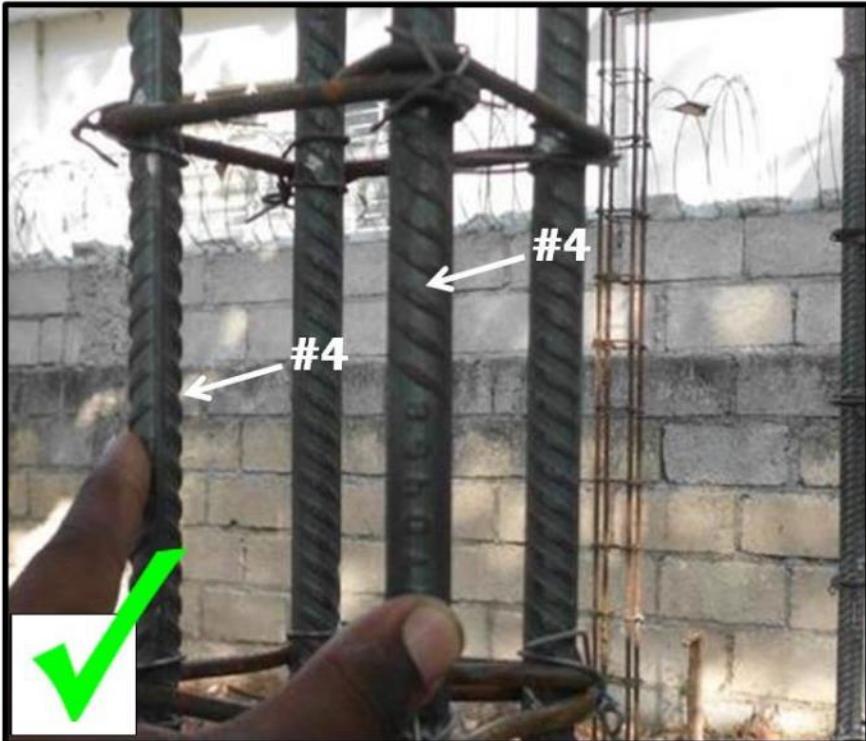

Achte ba fè # 4 pou fè poto ak chenaj yo.



SEKRÈ 26:



Achte ba fè # 3 pou fè ranfòseman fenèt yo.



SEKRÈ 27:



Estoke ba fè yo anndan.



SEKRÈ 28:



Achte blòk ki gen omwen 15cm epesè.



SEKRÈ 29:



Achte blòk ki pa defòme.



SEKRÈ 30:



Achte blòk ki pap kraze lè ou lage yo wotè tèt ou.



SEKRÈ 31:



Achte bwa ki dwat ki pa gen anpil ne.



SEKRÈ 32:



Achte omwen bwa 2x4 pou s pou fè chevwon.



SEKRÈ 33:



Achte omwen bwa 2x4 pou fè bòdi twati a



SEKRÈ 34:



Achte omwen bwa 1x4 pou fè lat.




SEKRÈ 35:



Estoke tout bwa yo anndan sou yon sifas plat.




SEKRÈ 36:

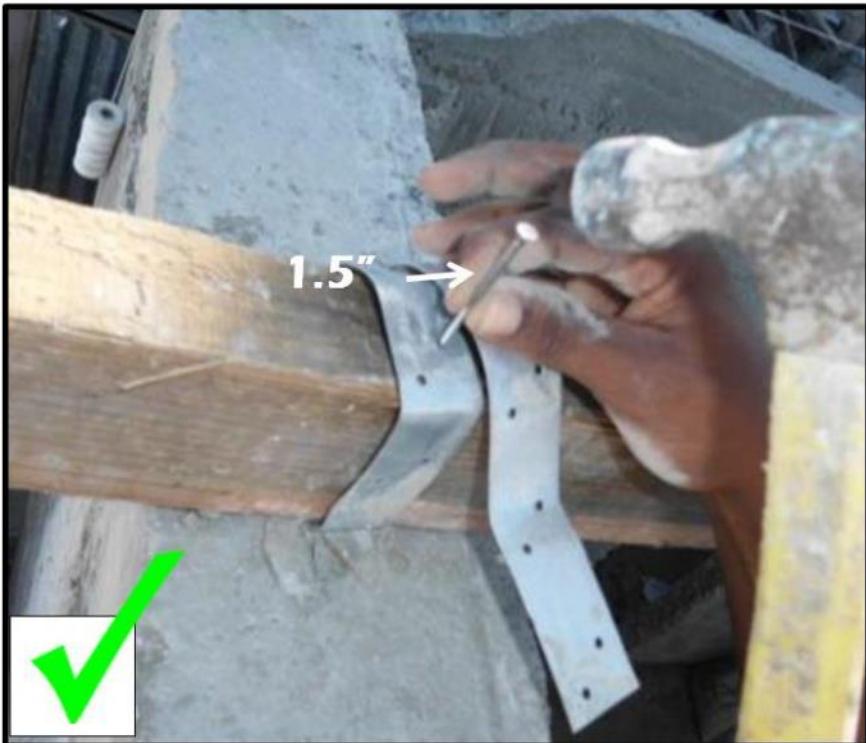

Achte omwen klou $1\frac{1}{2}$ pou atache strap yo.



SEKRÈ 37:

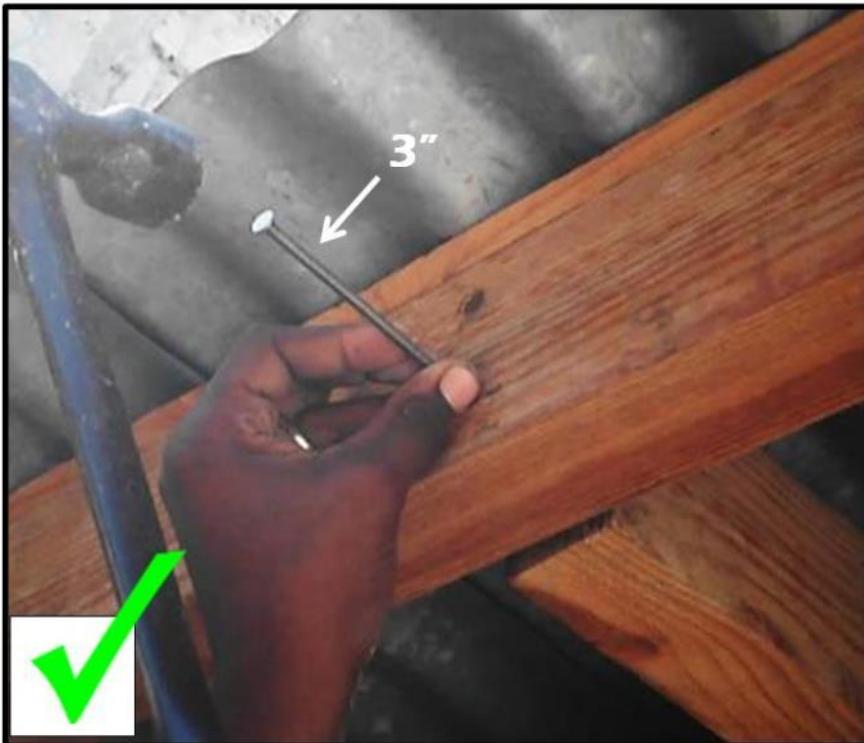

Achte omwen klou 3' pou konekte chevwon yo.



SEKRÈ 38:



Achte klou ki fèt pou atache tòl.




SEKRÈ 39:



Retire tout zèb ak debris anvan enplantasyon.





SEKRÈ 40:

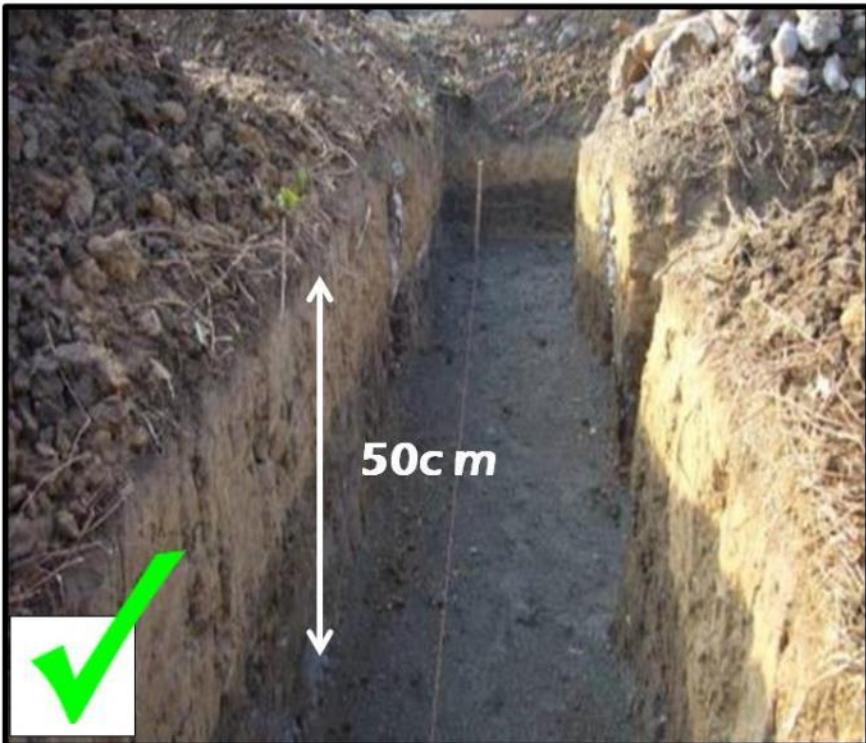

Fouye fondasyon an omwen 50cm profondè





SEKRÈ 41:

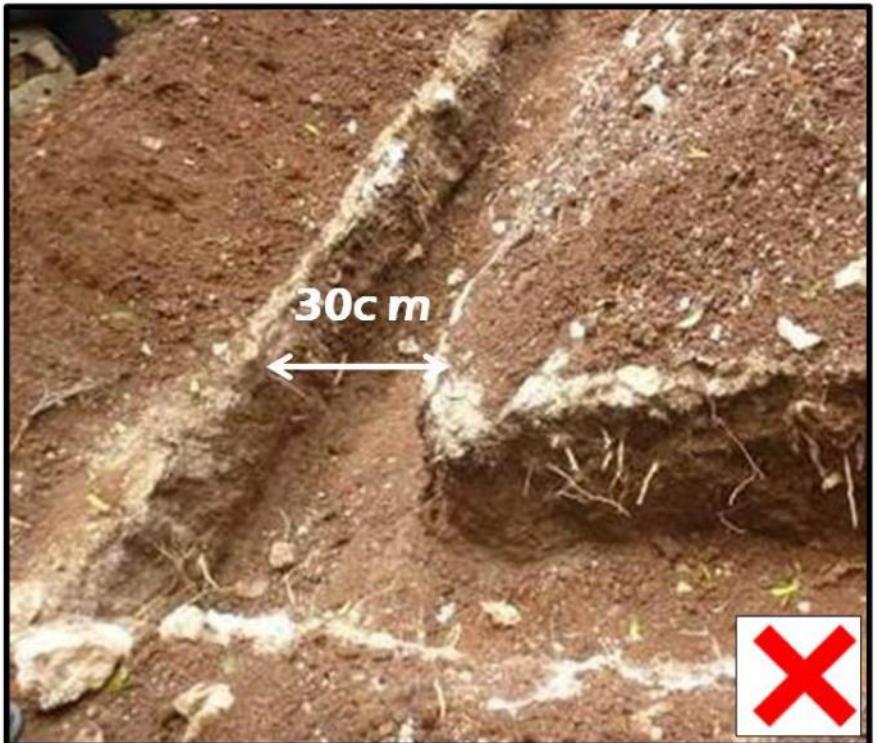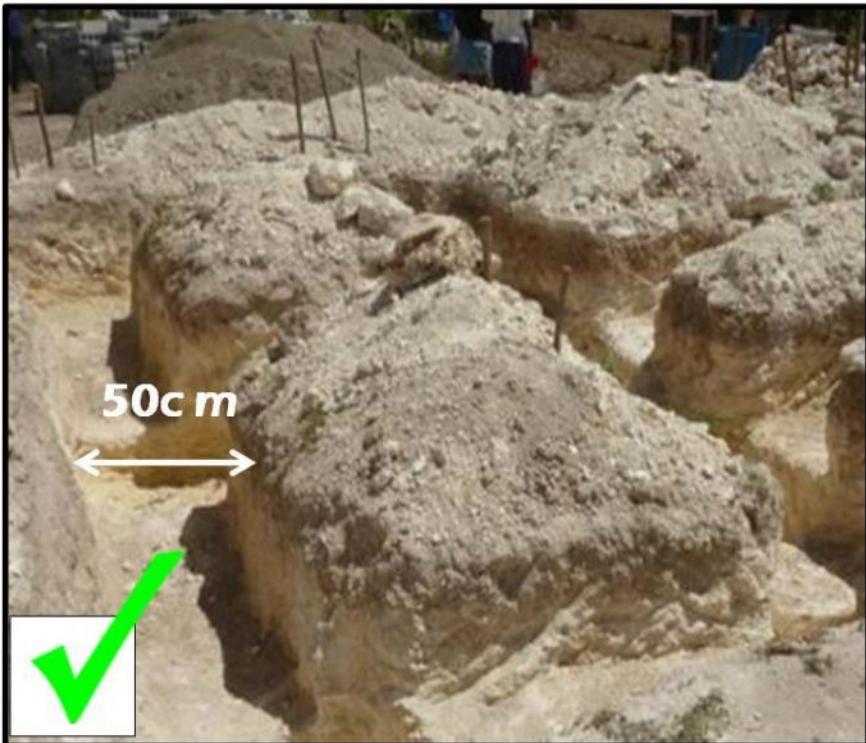

Fouye lajè fondasyon an omwen 50cm si sòl la di.



SEKRÈ 42:

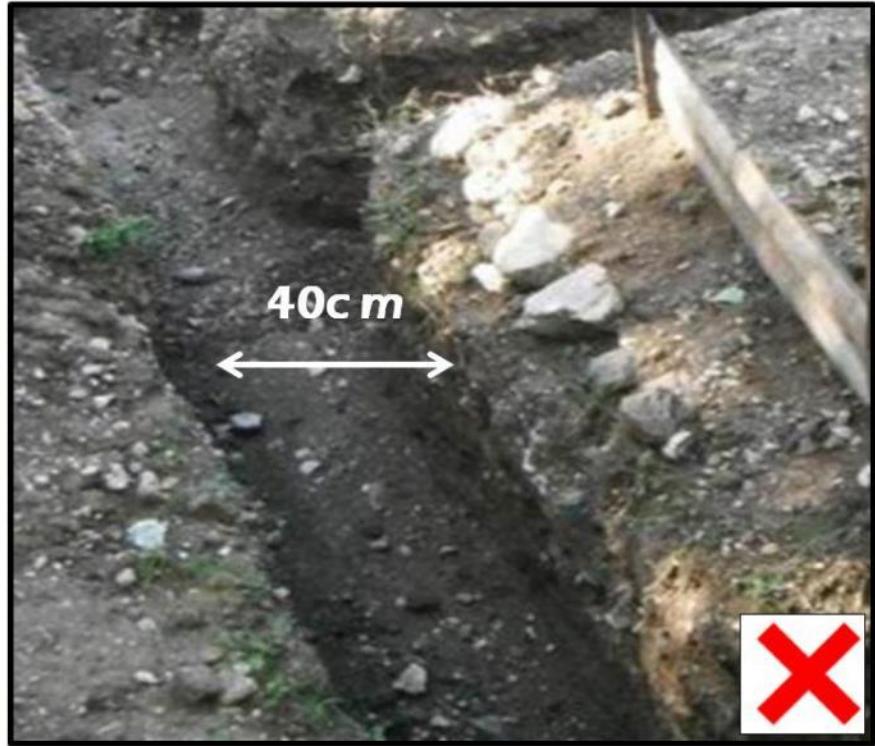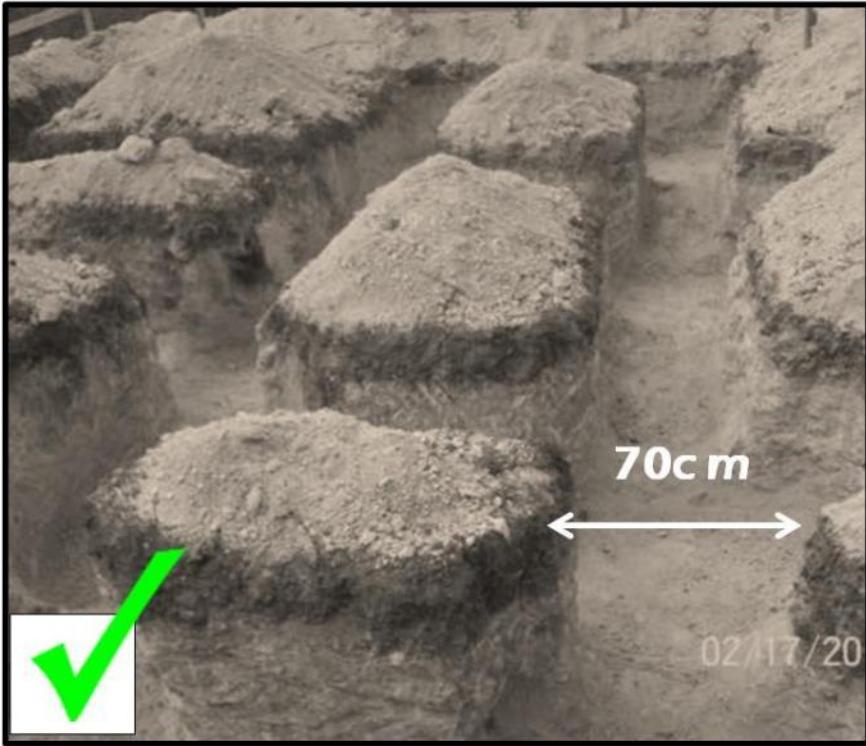

Fouye lajè fondasyon an omwen 70cm si sòl la mou
oswa lach.



SEKRÈ 43:



Fouye fondasyon jiskaske li nivo ak pwòp.




SEKRÈ 44:



Fè mòtye a ak yon melanj 1 siman pou 5 sab.



SEKRÈ 45:

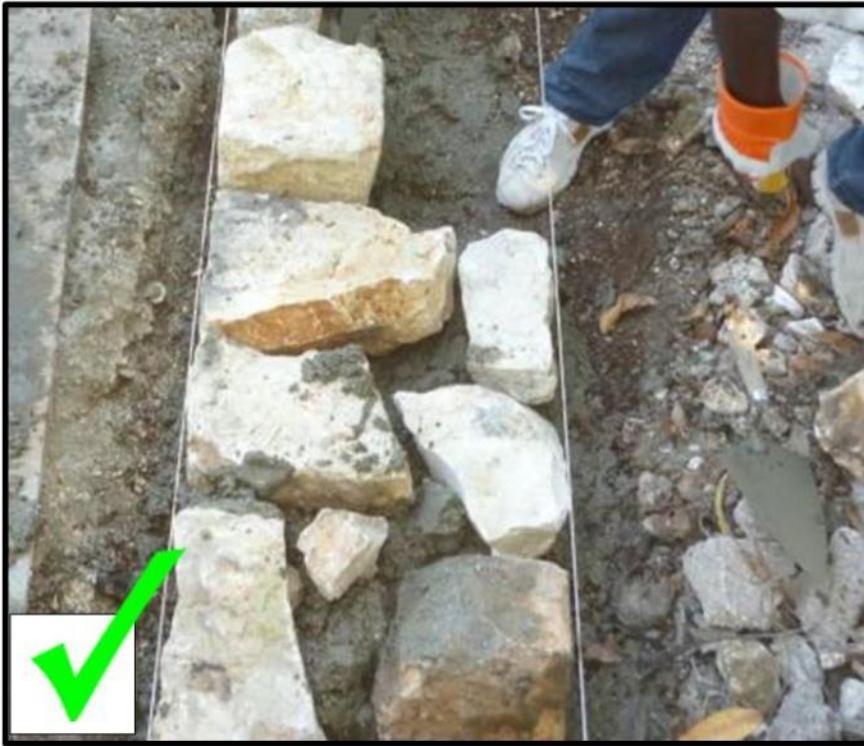

Poze wòch yo kouche ke kanpe.



SEKRÈ 46:



Poze wòch yo an zigzag.



SEKRÈ 47:



Plase mótye nan tout jwen wòch yo.




SEKRÈ 48:



Leve fondasyon an omwen 15cm pi wo pase nivo tè
a.



SEKRÈ 49:

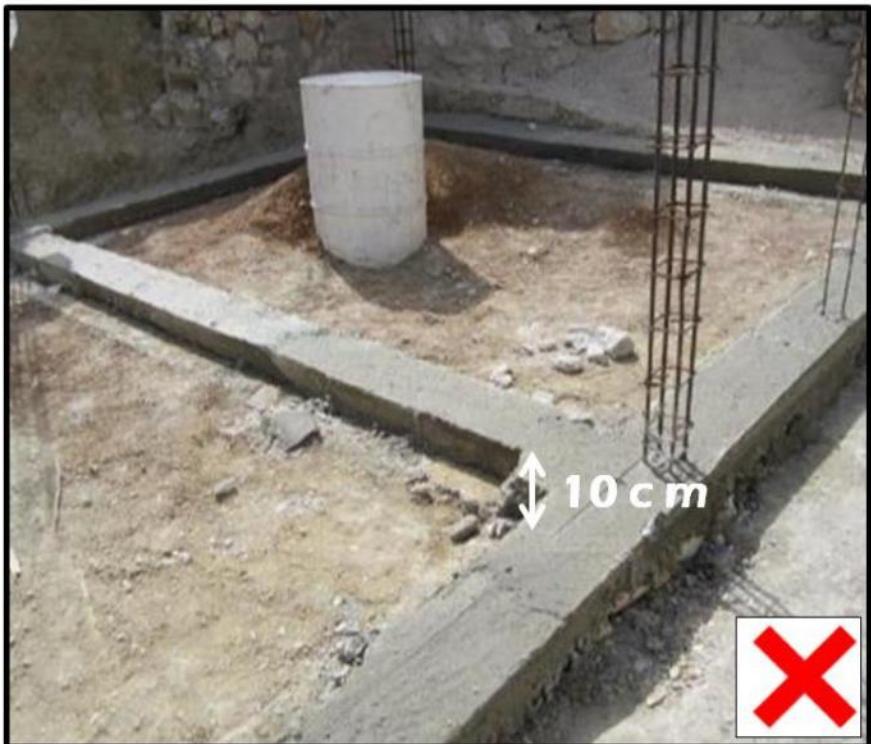

Leve fondasyon an omwen 65 cm pi wo pase nivo
tè a nan zòn inondasyon




SEKRÈ 50:



Plase kal ki fè omwen 7.5cm anba semèl yo.




SEKRÈ 51:

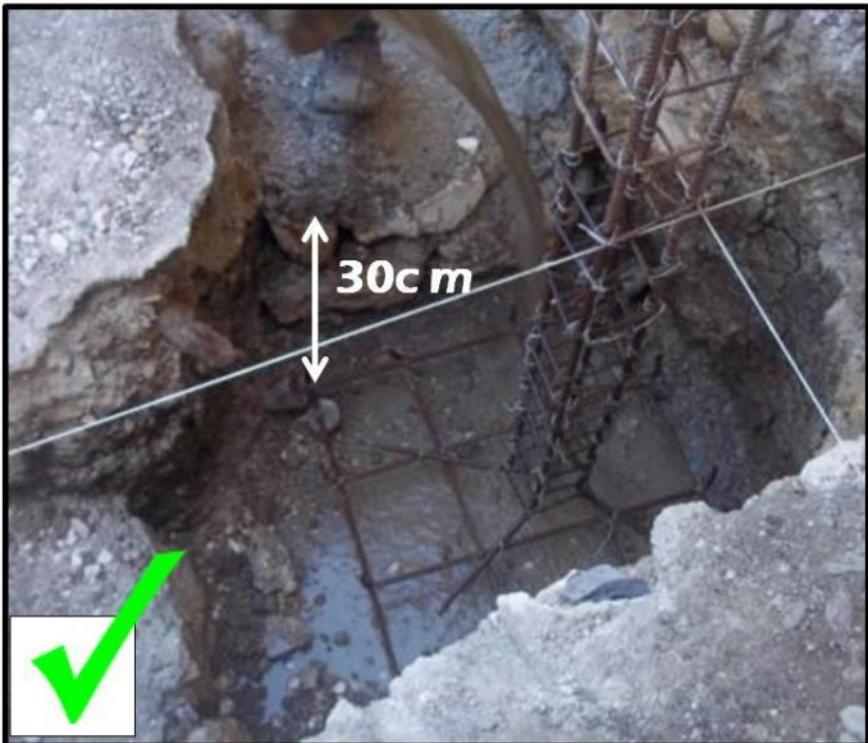

Koule yon beton omwen epesè 30cm sou semèl yo.



SEKRÈ 52:

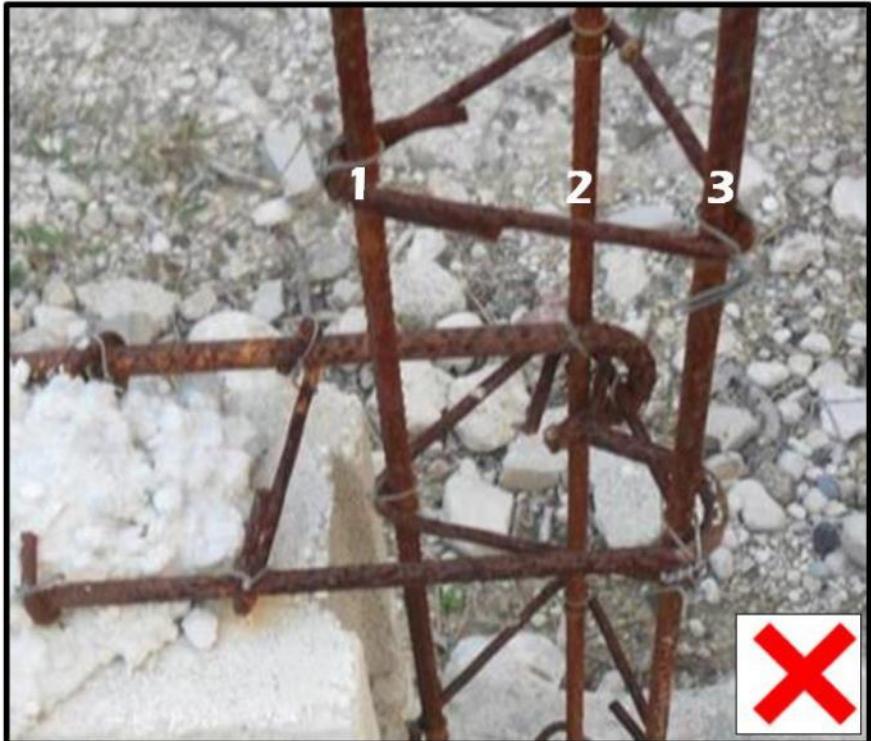

Fè poto yo ak 4 ba fè # 4.



SEKRÈ 53:



Fè longè kwochè etriye omwen 4cm ak yon ang 45^0 .





SEKRÈ 54:



Plase kwochè etriye yo anwotasyon.



SEKRÈ 55:

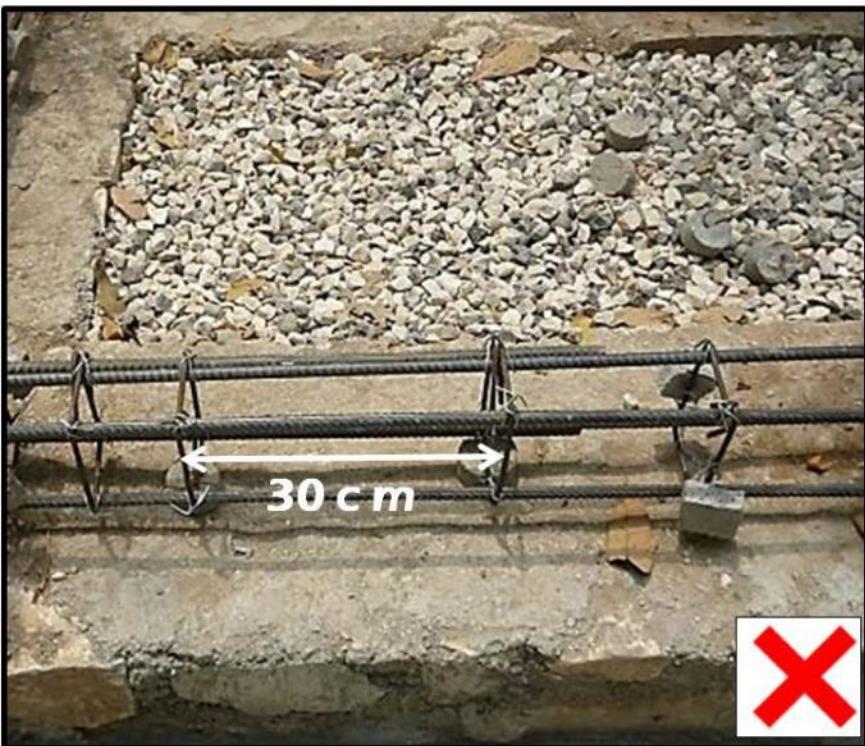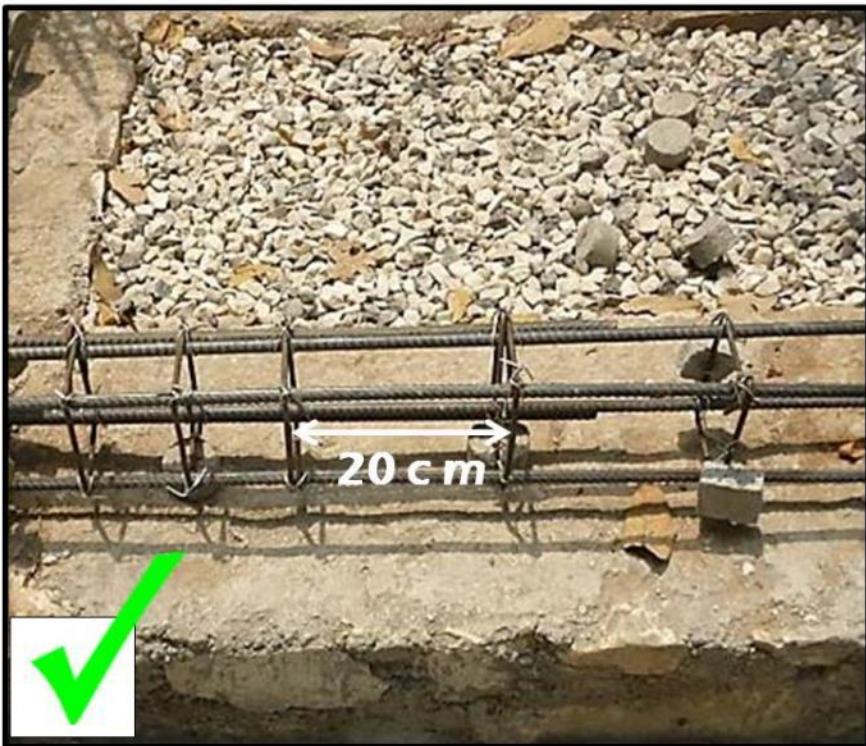

Plase etriye pa plis pase 20cm espasman.




SEKRÈ 56:



Raproche 5 premye etriye yo nan chak kwazman
poto ak chenaj pa plis pase 10cm




SEKRÈ 57:

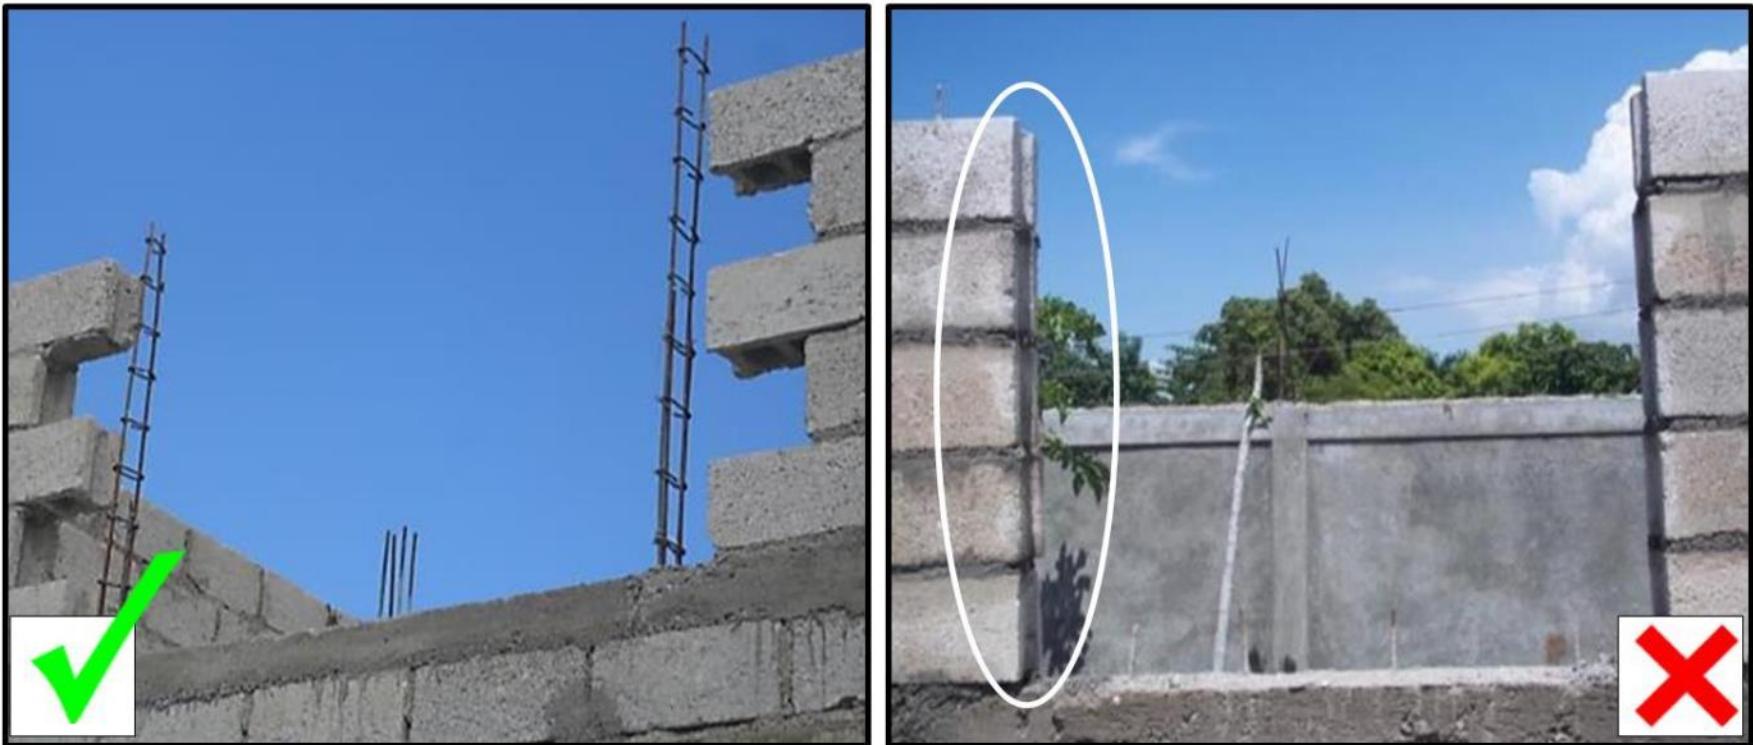

Plase 2 ba fè #3 nan ranfòseman fenèt yo.





SEKRÈ 58:

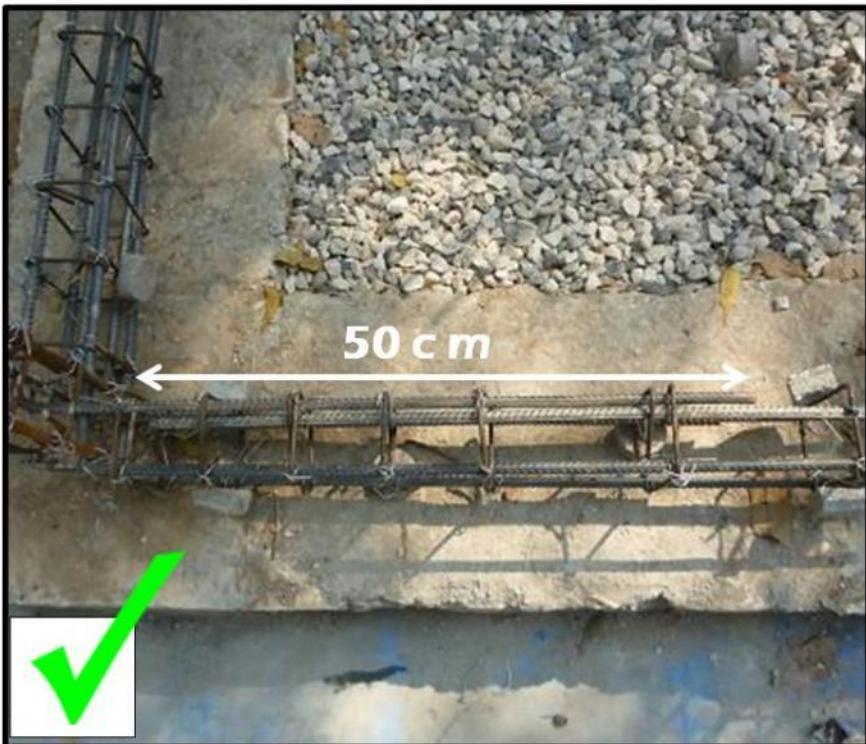

Fè alonjman fè #4 omwen 50cm.





SEKRÈ 59:

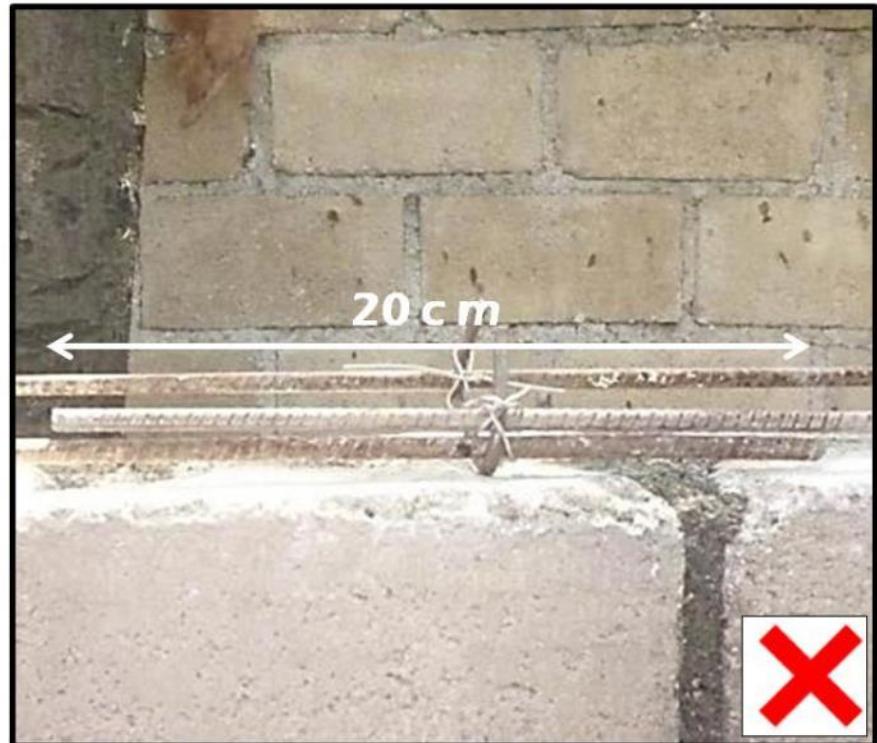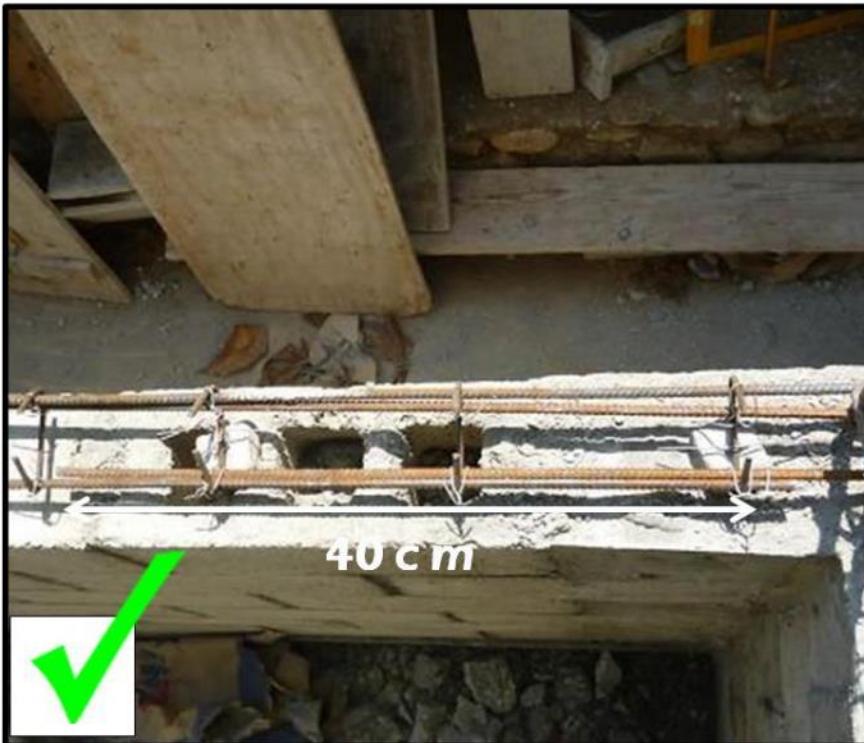

Fè alonjman fè #3 omwen 40cm.



SEKRÈ 60:

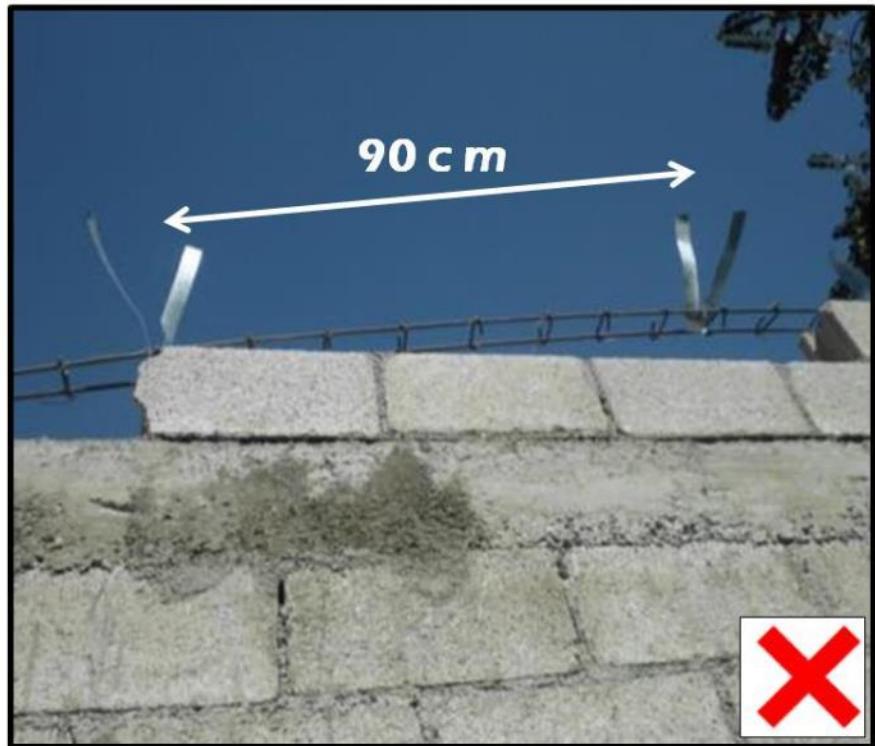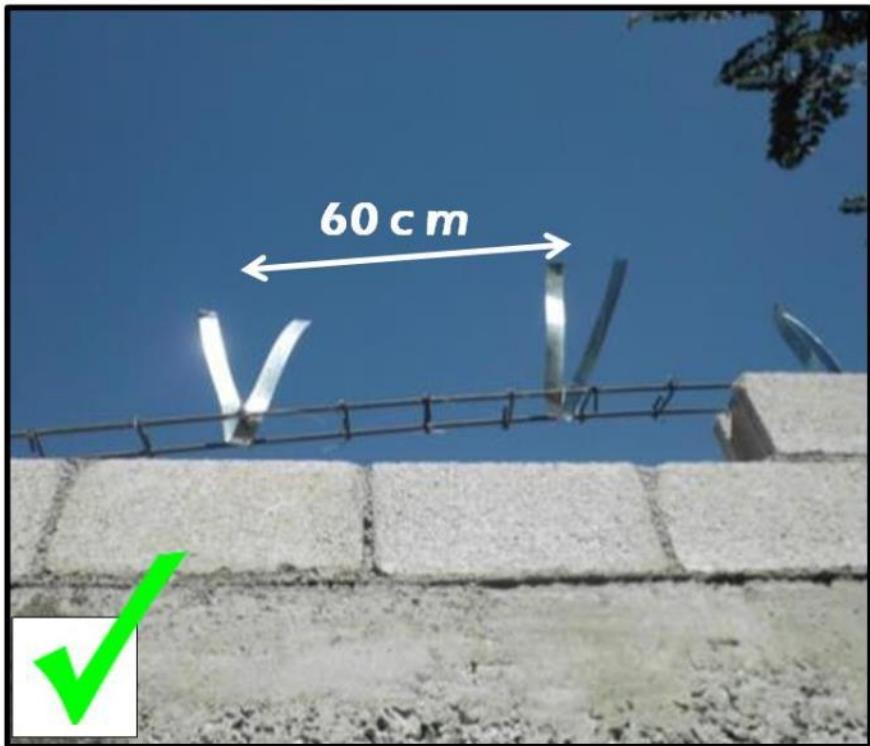

Plase estrap yo pa plis pase 60cm espasman.




SEKRÈ 61:



Plase estrap yo anba etriye chenaj siperye a.



SEKRÈ 62:

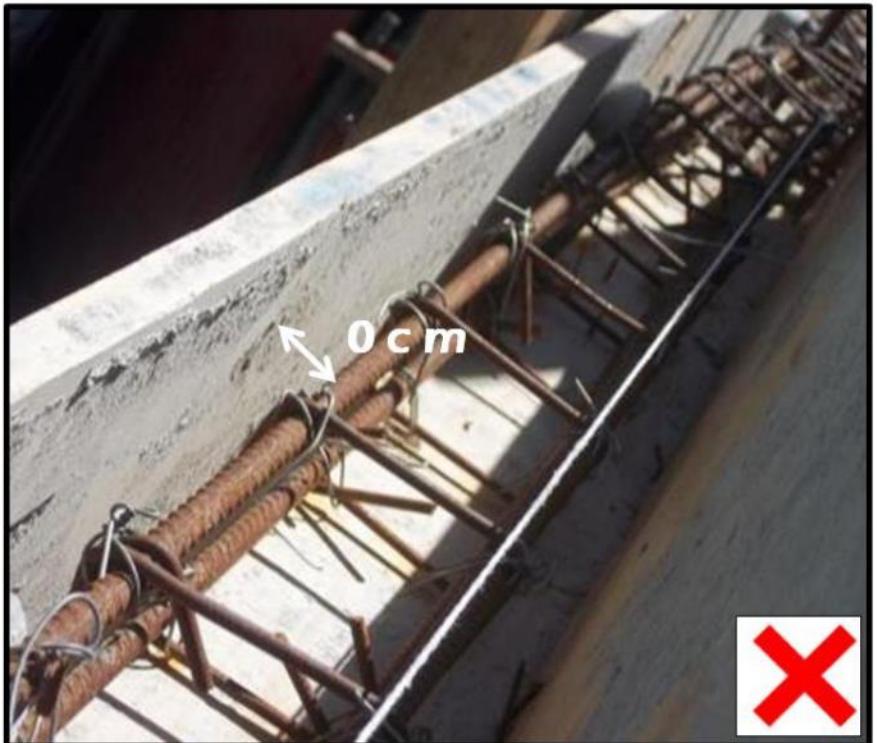

Plase kal omwen 2.5cm epesè pou byen kouvri fè yo ak beton.



SEKRÈ 63:



Wouze kofraj yo avan ou kòmanse vide beton an.



SEKRÈ 64:



Fè melanj mòtye a sou yon sifas ki pwòp.



SEKRÈ 65:



Fè yon melanj ki pa gen twòp dlo.



SEKRÈ 66:



Pou fè beton an, byen melanje gravye ,sab ak siman
anvan ou ajoute dlo.



SEKRÈ 67:



Sèvi ak beton an avan li gen 30 minit a tè a.




SEKRÈ 68:



Fè beton an, ak yon melanj 1 siman ,2 sab ak3
gravye.



SEKRÈ 69:

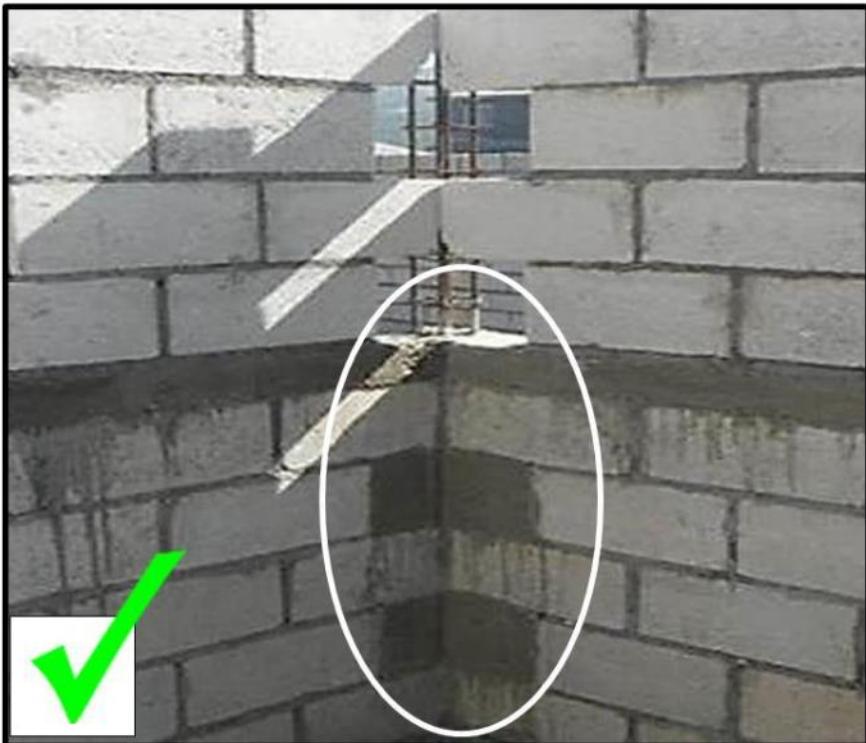

Vide beton poto yo an 2 tan.



SEKRÈ 70:



Vide beton chenaj yo an 1 tan




SEKRÈ 71:



Vibre beton an pandan Vide I.



SEKRÈ 72:

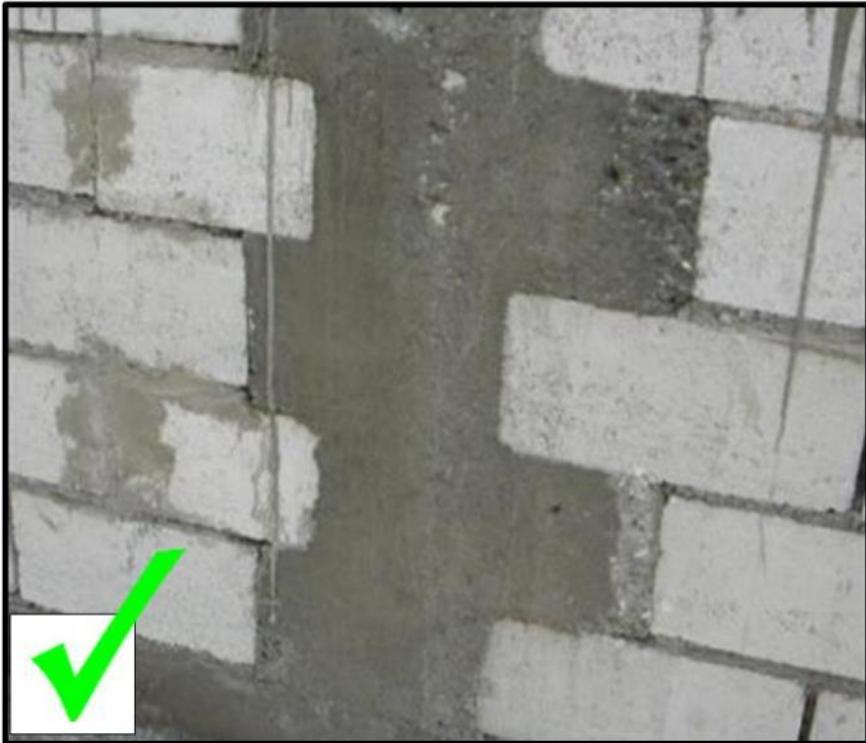

Refè beton nan tout pati ki vid yo.





SEKRÈ 73:



Refè beton nan tout pati ki gen ni abèy yo.





SEKRÈ 74:

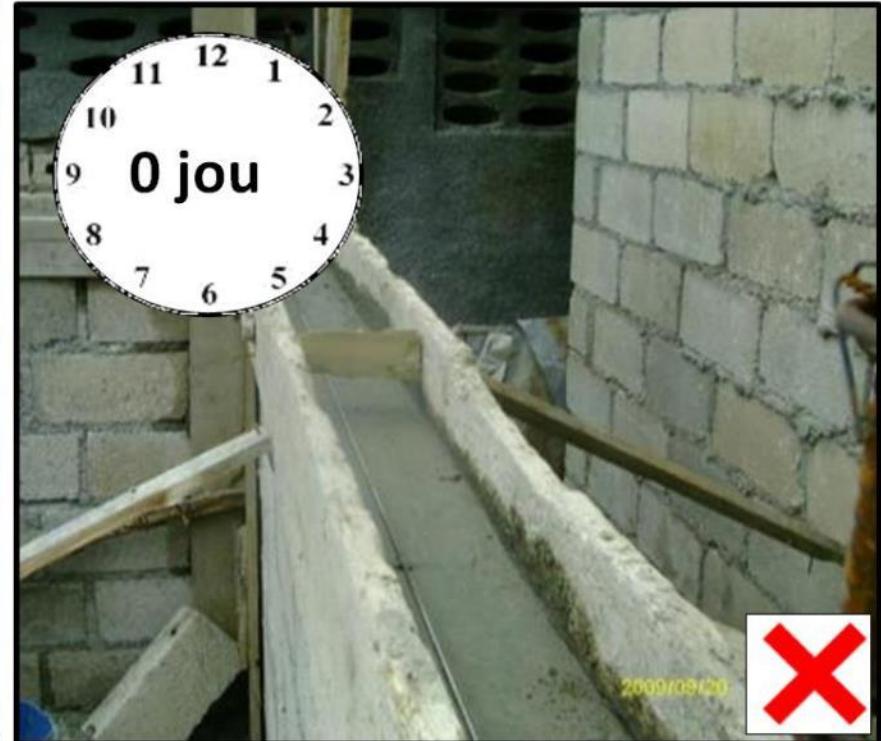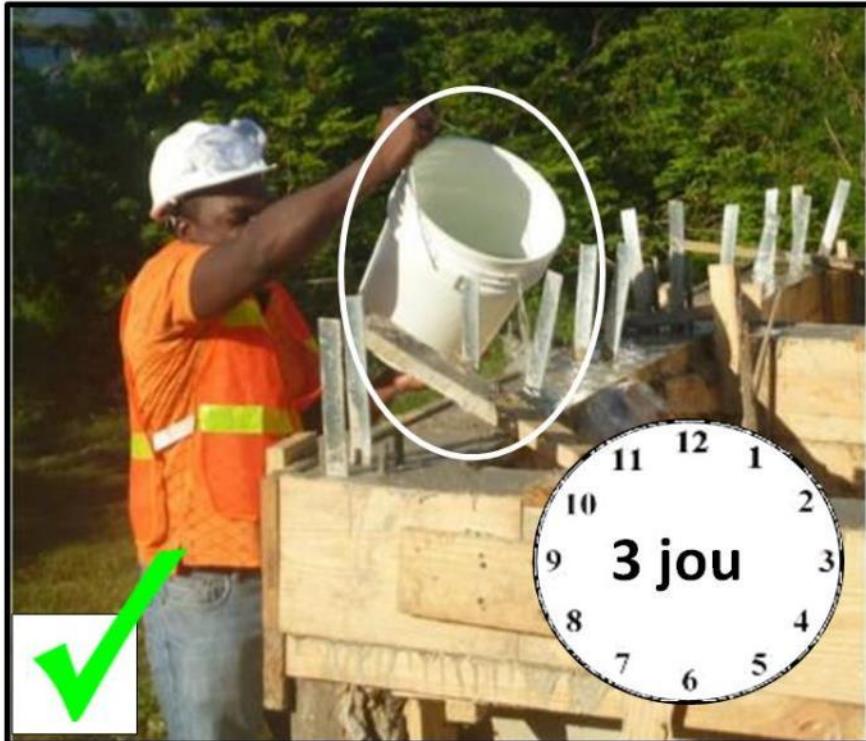

Wouze beton an pandan 3 jou.



SEKRÈ 75:

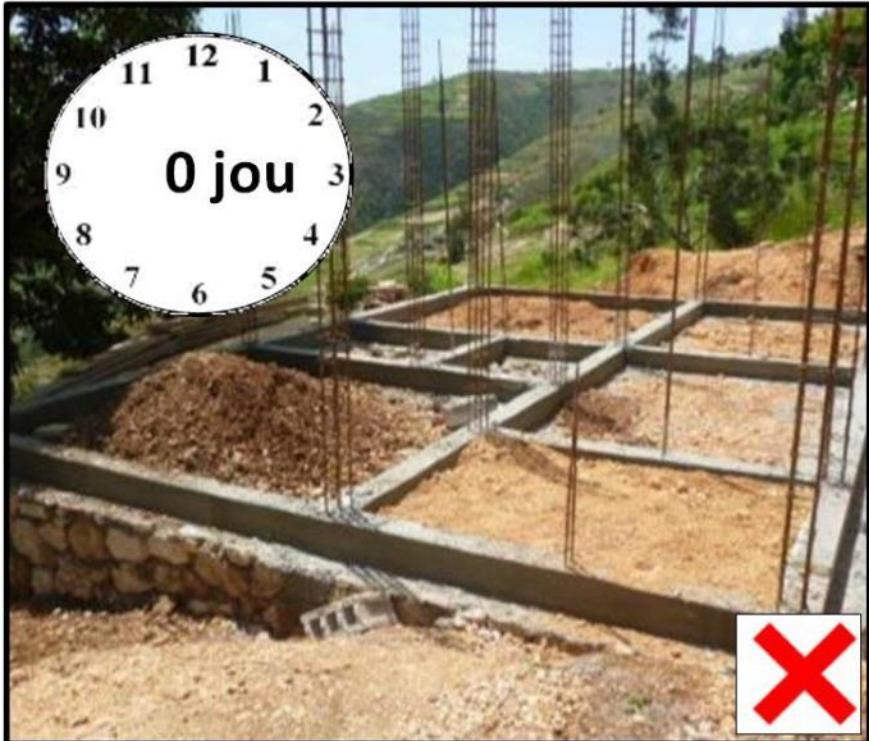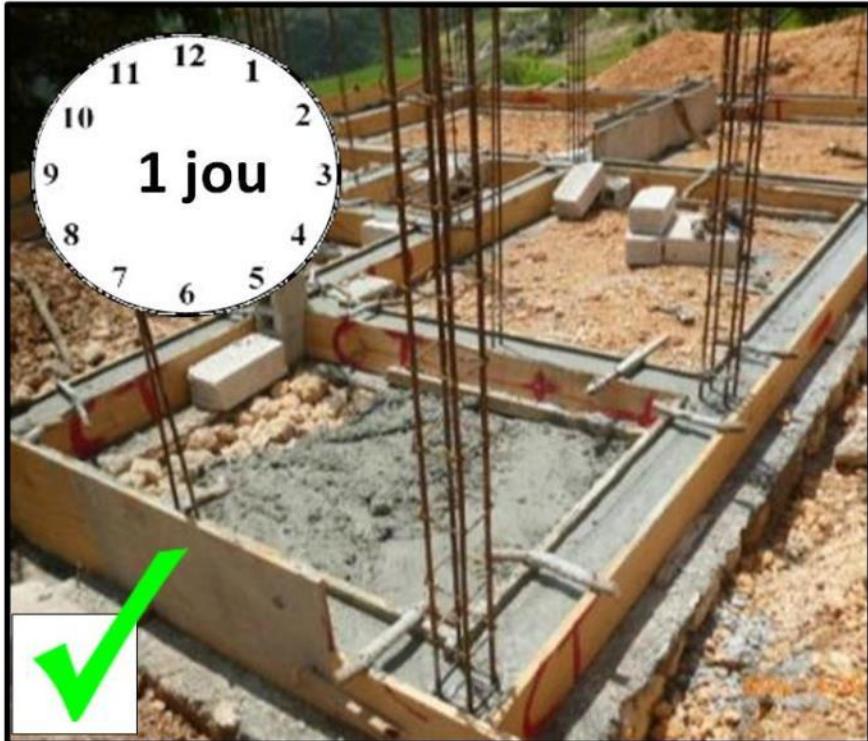

Kite kofraj poto ak chenaj yo omwen 1 jou



SEKRÈ 76:



Kite kofraj dal la omwen 14 jou.



SEKRÈ 77:



Fè melanj beton an sou yon sifas ki pwòp.



SEKRÈ 78:



Fè mótye a, ak yon melanj 1 siman , pou 5 sab.




SEKRÈ 79:



Pou fè mòtye a , byen melanje sab ak siman anvan ou ajoute dlo.



SEKRÈ 80:

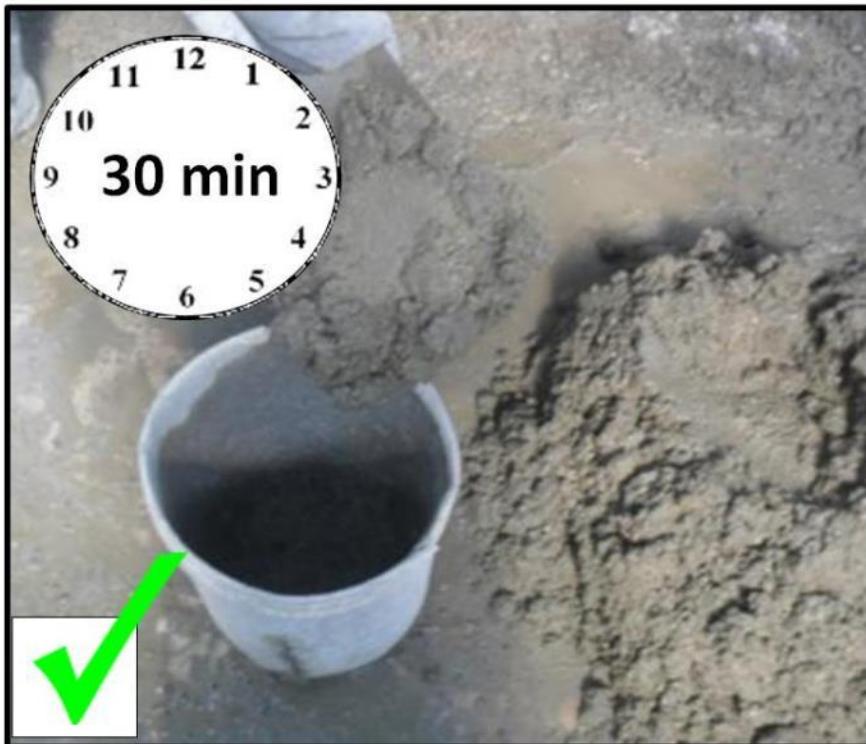

Sèvi ak mòtye a avan li gen 30 minit a tè a.



SEKRÈ 81:



Wouze blòk yo anvan ou kòmanmse poze l.




SEKRÈ 82:



Fè lajè apaj mi yo omwen 14cm.



SEKRÈ 83:

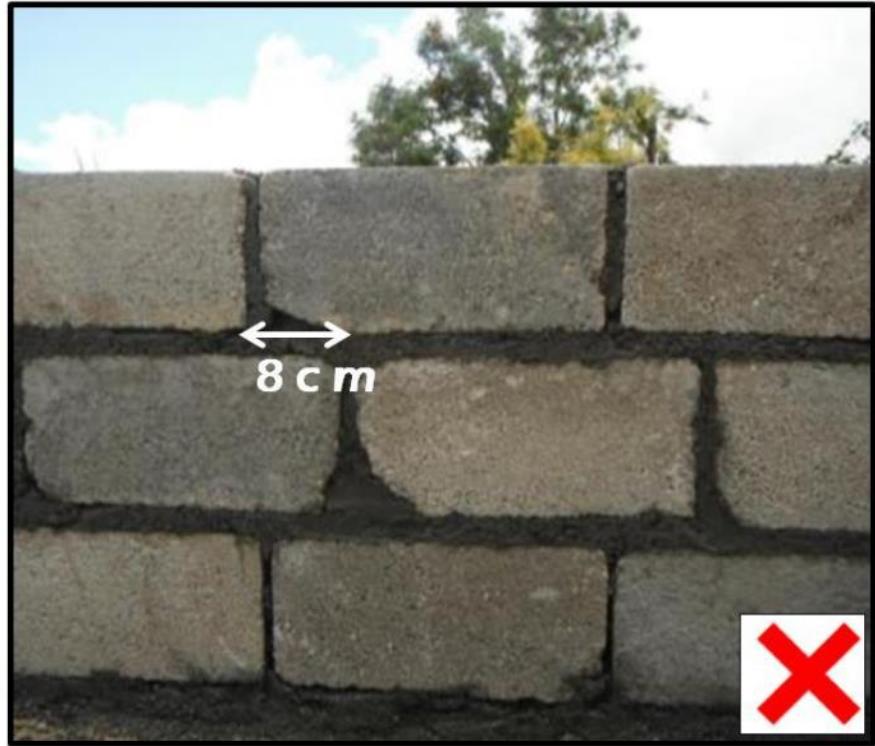

Fè distans ant 2 jwen vètikal omwen 14cm.





SEKRÈ 84:



Poze blok omwen ki gen yon sèl alveròl.



SEKRÈ 85:

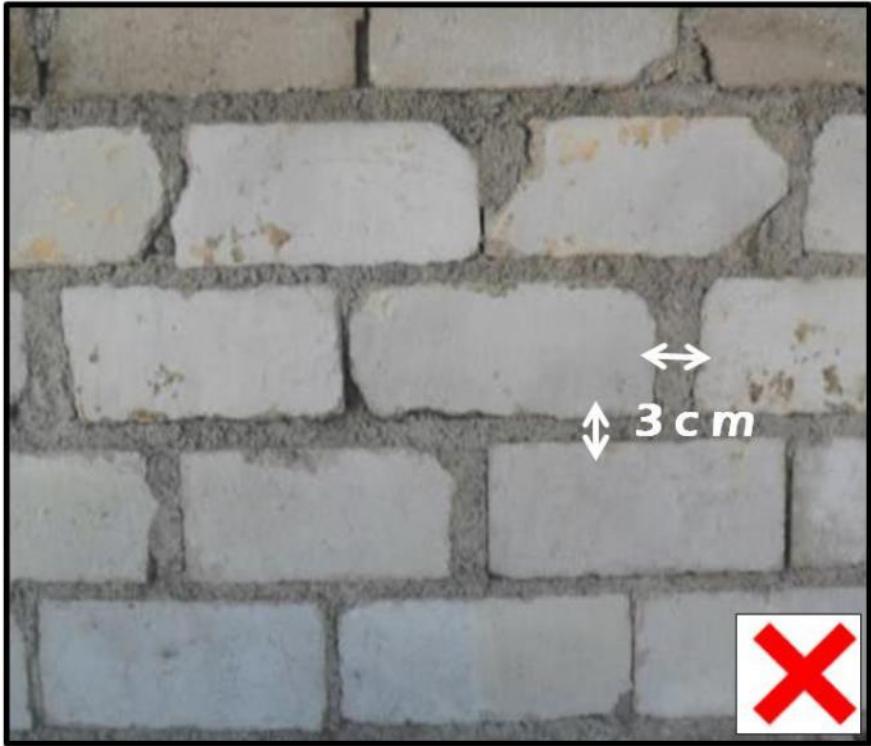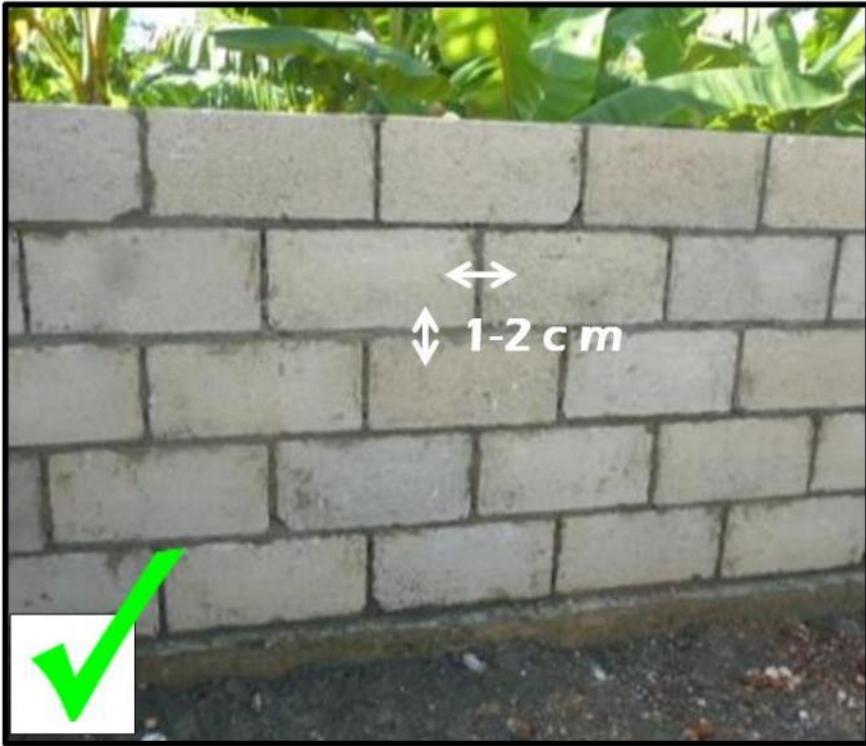

Fè jwen mòtye blòk yo ant 1a 2cm





SEKRÈ 86:



Monte mi yo aplon.



SEKRÈ 87:

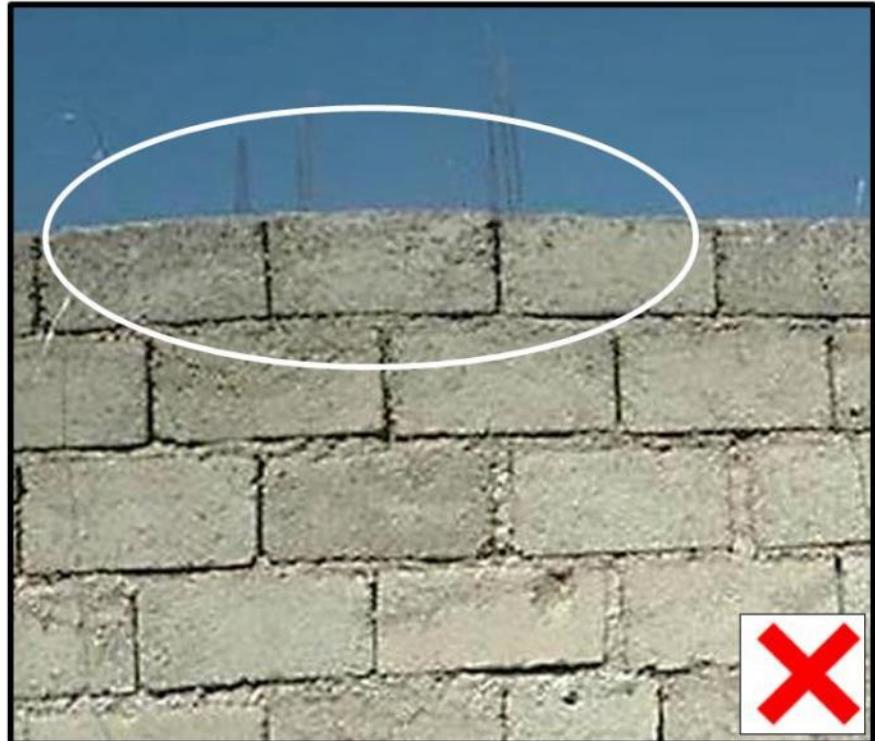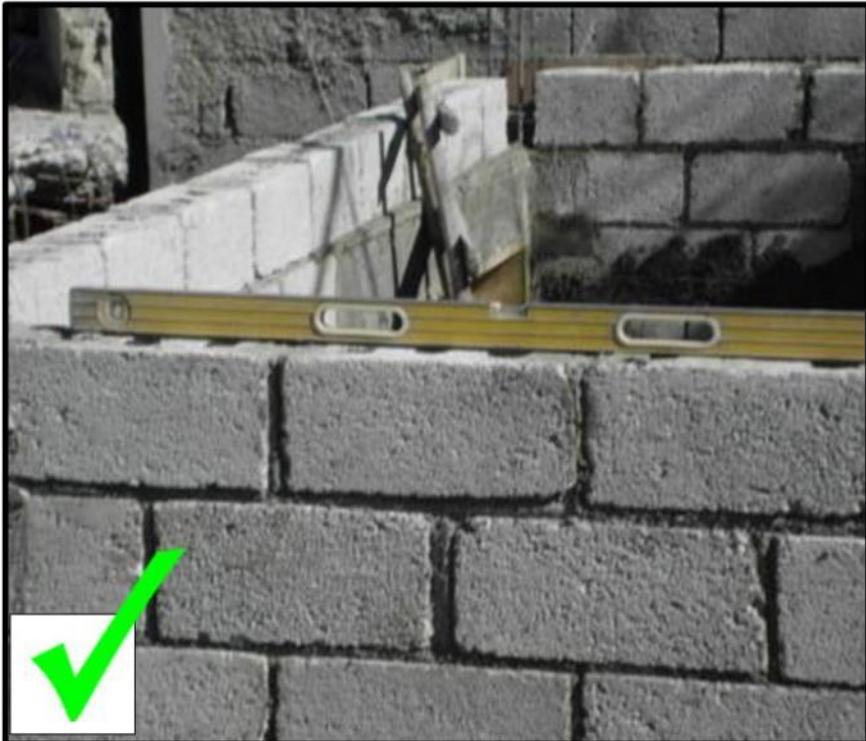

Monte mi yo nivo.



SEKRÈ 88:



Wouze mi yo 3 fwa pa jou pandan 3 jou.



SEKRÈ 89:



Plase bout bwa pou sere kofraj la.




SEKRÈ 90:



Fè kofraj la nivo epi aplon.



SEKRÈ 91:

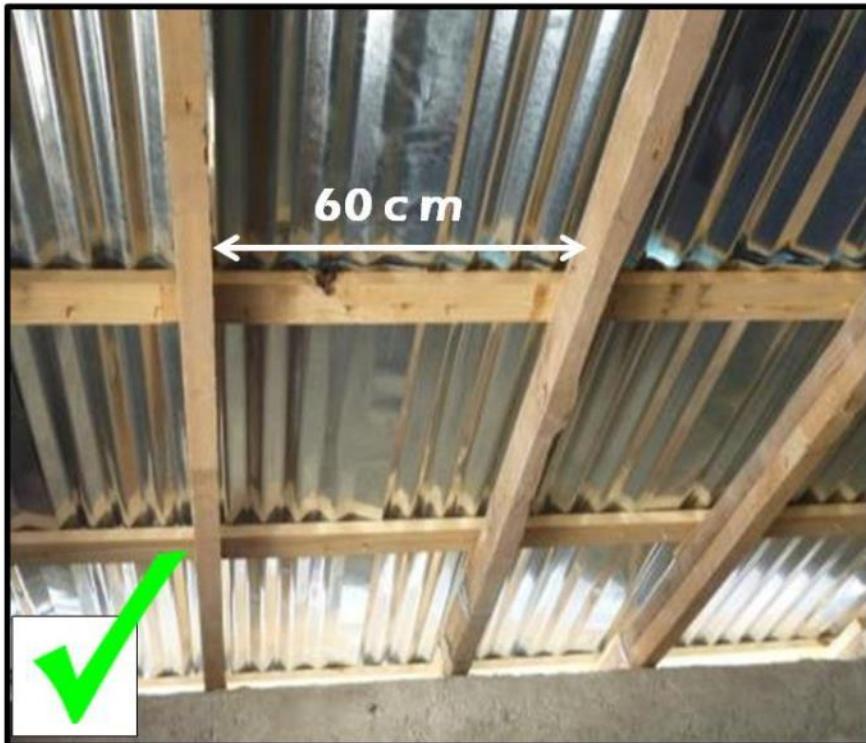

Plase chewwon yo pa plis pase 60cm espasman.



SEKRÈ 92:



Konekte chevwon yo sou chenaj sipryè a avèk estrap .




SEKRÈ 93:



Konekte estrap la ak chewwon yo avèk omwen 2
klou 1'1/2.



SEKRÈ 94:

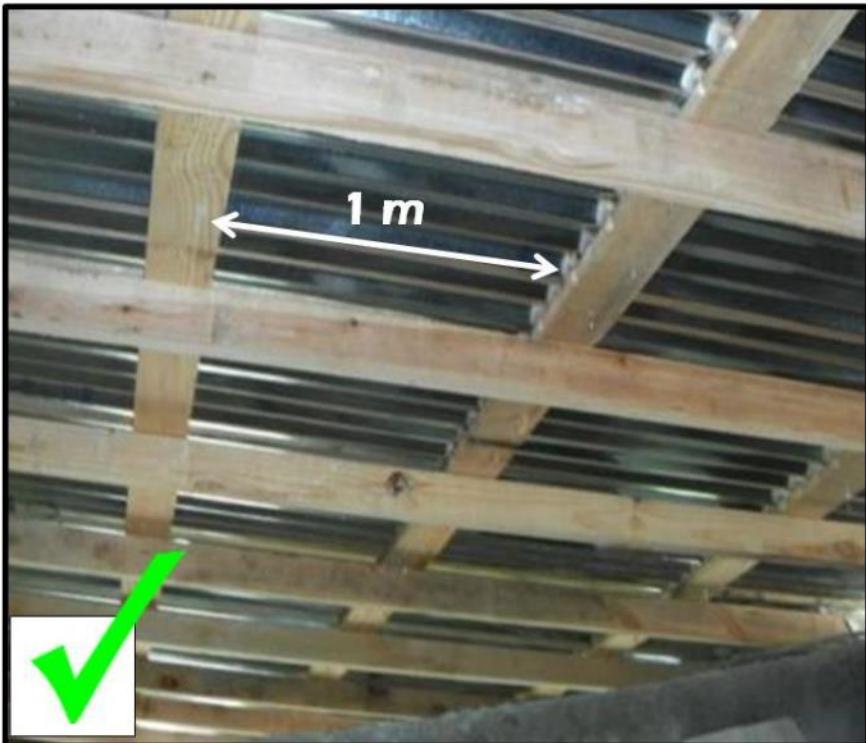

Plase lat yo pa plis pase 1m espasman.




SEKRÈ 95:



Konekte bwa bòdi twati a nan chak chewwon.



SEKRÈ 96:

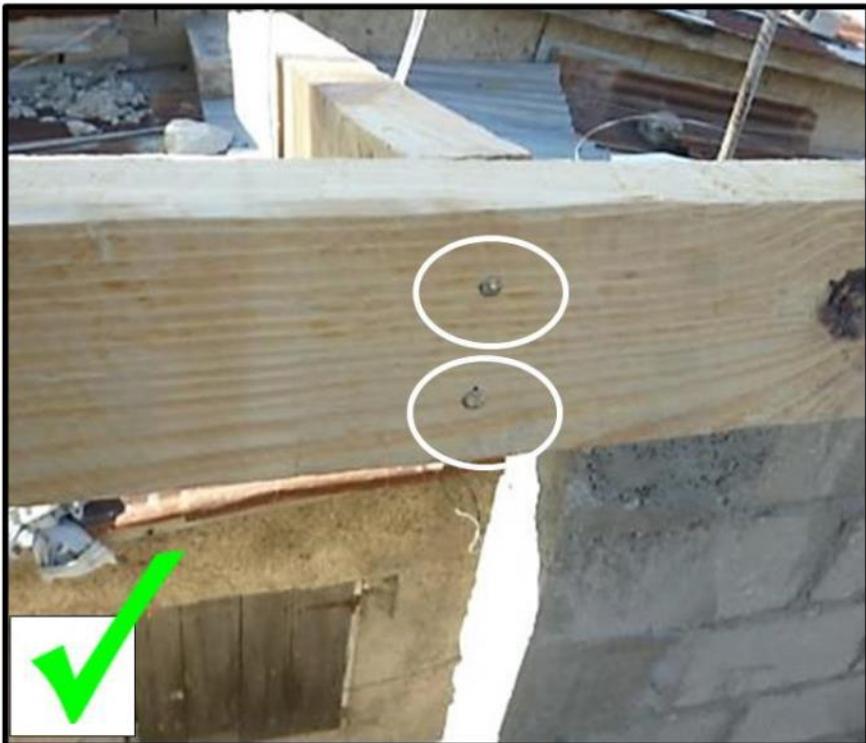

Konekte chewwon yo avèk omwen 2 klou 3'.





SEKRÈ 97:



Plase tòl la omwen 15cm sou lòt la.





SEKRÈ 98:

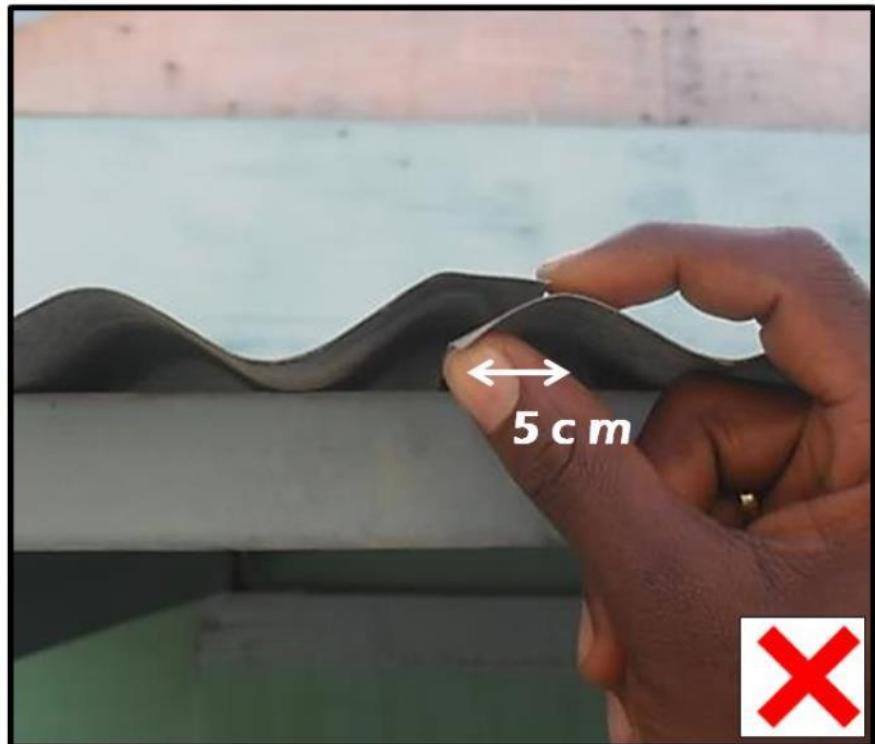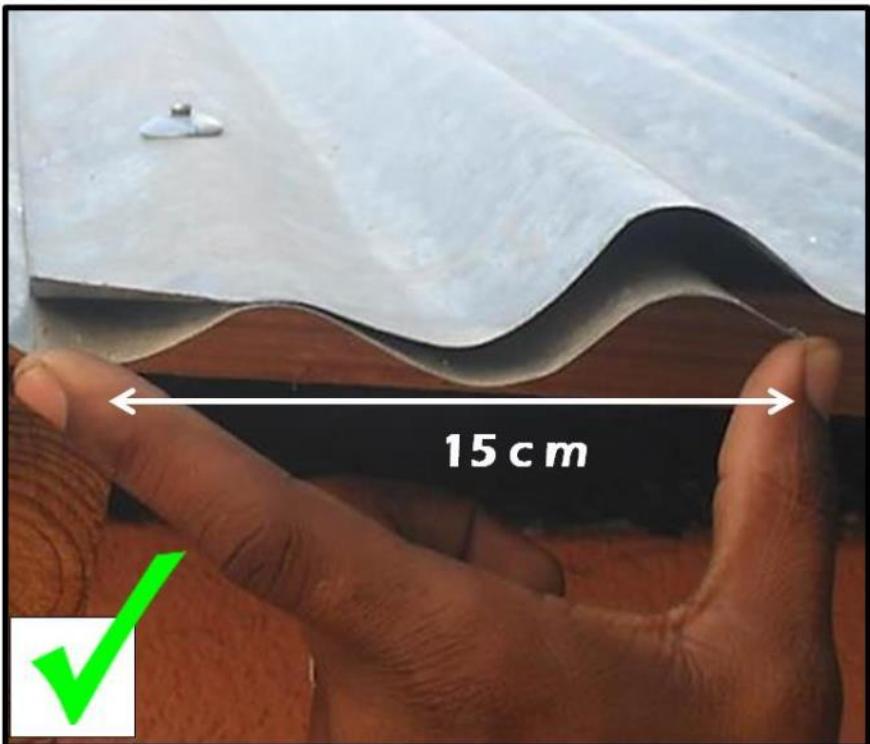

Plase tòl la omwen 15cm sou lòt la.



SEKRÈ 99:

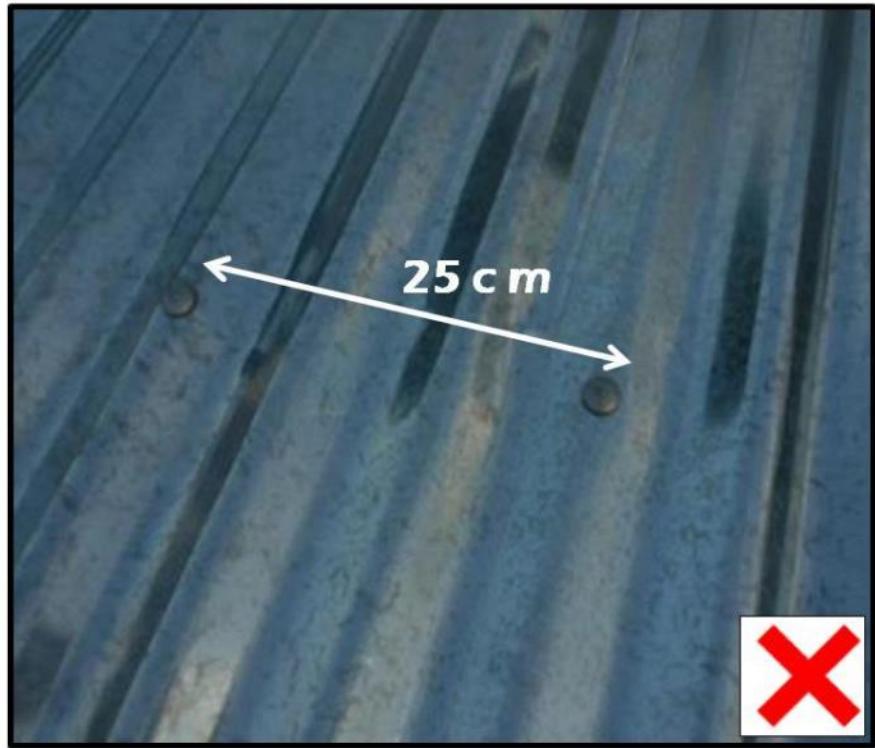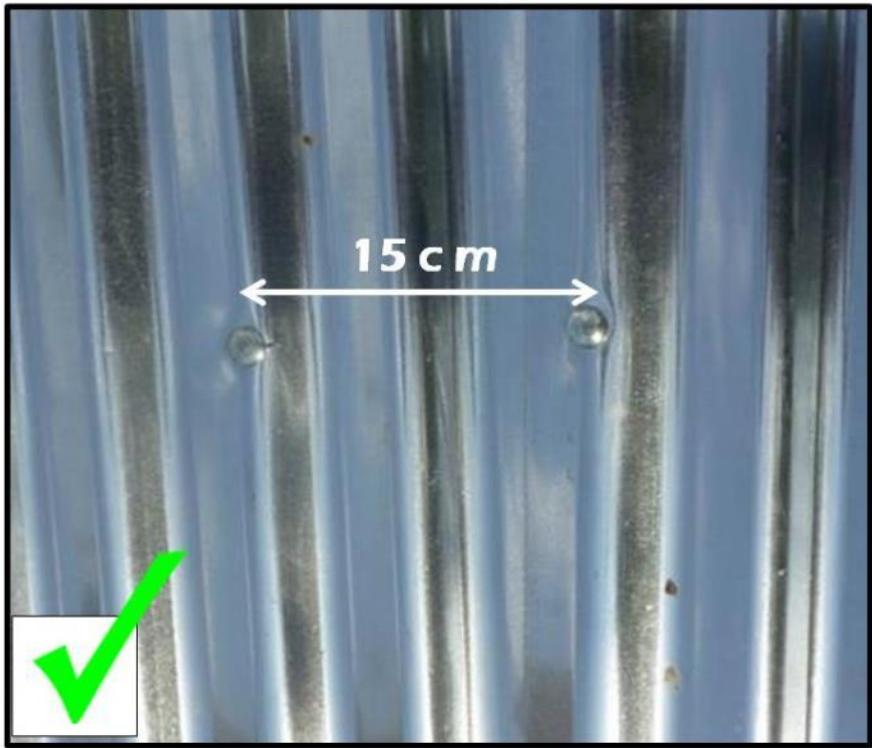

Plase klou tòl yo pa plis pase 15cm espasman.



SEKRÈ 100:



Fouye fòs septik la omwen 10m akote kay la.



SEKRÈ 101:



Fè enstalasyon elektrik yo san ou pa kase mi yo.



SEKRÈ 102:



Fè enstalasyon tiyo plonbri yo san ou pa kase chenaj
yo.





Kenbe tèt ou, mon cher!

